

1. Multiple Connectors
2. Clutch Switch
3. Start-Up Relay
4. Start-Up Maintenance Relay
5. Light Logic Relay
6. Fog Lights Relay
7. Right Light Switch
8. Left Light Switch
9. Horn
10. Instrument Panel Air Temp. Thermistor
11. Instrument Panel
12. Immobilizer Antenna
13. Ignition Switch
14. Heated Handgrips
15. GPS Connector.
16. Electric Lock
17. Rear Right Turn Indicator
18. Rear Light Assembly
19. Rear Left Turn Indicator
20. License Plate Light Bulb
21. Rear Stop Switch
22. Front Stop Switch
23. ECU Diagnosis
24. Auxiliary Fuses
25. Starter Motor
26. Battery
27. Power Outlet
28. Main Fuses
29. Generator
30. Main Injection Relay
31. Secondary Injection Relay
32. Oil Pressure Sensor
33. Neutral Switch
34. Lambda Sensor
35. Side Stand Switch
36. Fuel Level Sensor
37. Fuel Pump
38. Intake Air Temp. Thermistor
39. Engine Temp. Thermistor
40. Idle Motor
41. Throttle Sensor
42. Right Spark Plugs
43. Left Spark Plug
44. Right Coil
45. Left Coil
46. Right Cylinder Injector
47. Left Cylinder Injector
48. Speed Sensor
49. Fall Sensor
50. Pickup
51. ECU
52. Fog Lights
53. Front Left Turn Indicator
54. Head Light Assembly
55. Tail Light Bulb
56. Low Beam Bulb
57. High Beam Bulb
58. Front Right Turn Indicator
59. Instrument Panel Diagnosis
60. Antitheft Device ECU (Optional)
61. Helmet Compartment Switch
62. Glove Box Opening Relay

